VEHICLE DISASSEMBLY

2007-Up Kia Optima

RADIO REMOVAL:

1. Using a panel removal tool, start from the steering column and unsnap the dash panel surrounding the factory radio.
2. Use a Phillips head screwdriver to remove (4) screws securing the factory radio.
3. Lift away, disconnect and remove.

MOUNTING THE RADIO

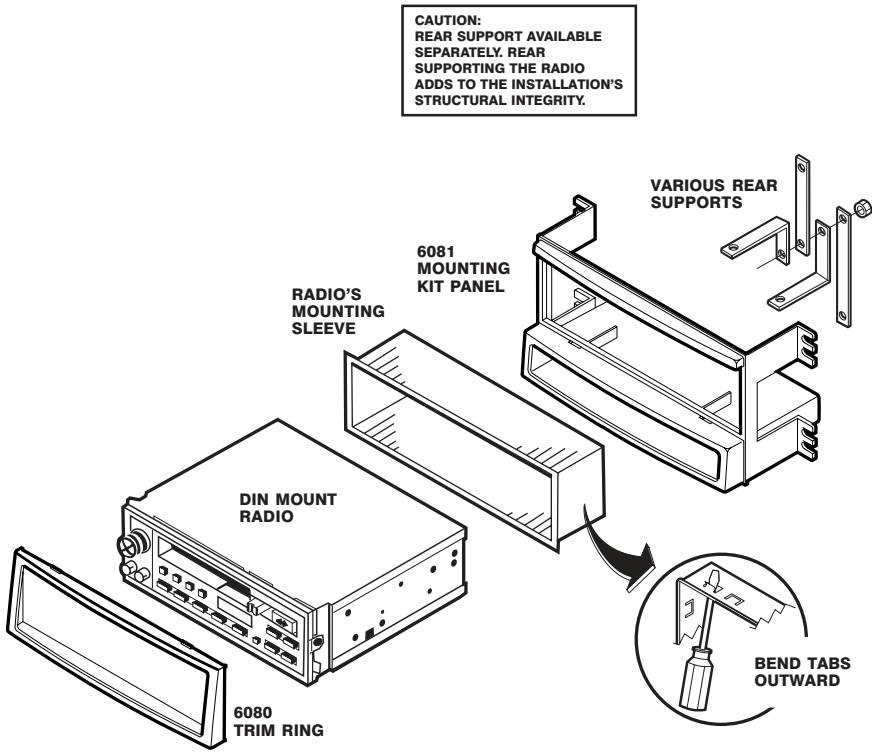
CAUTION:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.
VARIOUS REAR SUPPORTS
6081 MOUNTING KIT PANEL
RADIO'S MOUNTING SLEEVE
DIN MOUNT RADIO
BEND TABS OUTWARD
6080 TRIM RING

SCOSCHE®

KA2068

IN-DASH INSTALLATION KIT FOR 2007-UP KIA OPTIMA

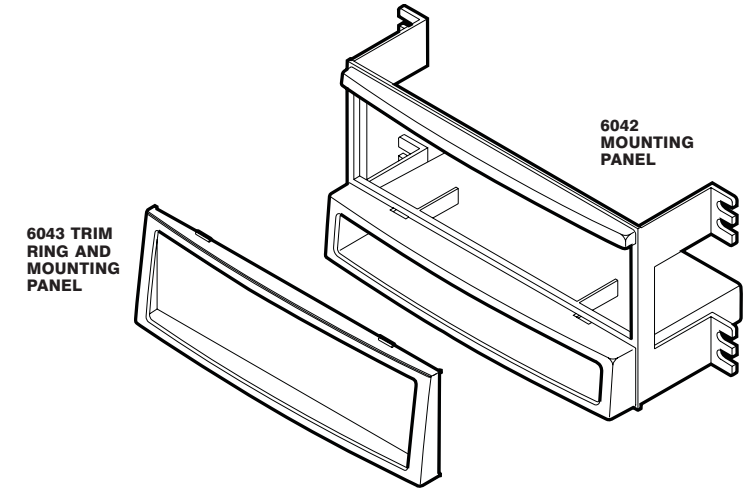

FACTORY WIRING CODES

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HY07B
2006-Up Hyundai Accent and Azera;
2005-Up Kia Sportage

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche KA2068 Kit. This Kit was manufactured with the highest of quality standards.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/ inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: **TECH HELP 1-800-621-3695x3**

©2006 SCOSCHE INDUSTRIES, INC.

KA2068 6/06 (3000003)